

Tools Required: (Not included)

- A. Phillips head screwdriver
- B. 2.5mm Allen wrench
- C. Flat head screwdriver

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before attempting these procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Lift the Pocket Mod seat.



Figure 1

Step 2

Using a Phillips head screwdriver, remove the four screws in the seat compartment. Remove the seat compartment insert.



Figure 2

Step 3

Using a Phillips head screwdriver, remove the three screws along the front bottom of the seat fairing cover. Before removing the cover, disconnect the white plastic connectors on the wires to the power switch and charger port.



Figure 3

Step 4

Follow the throttle wire from the top of the handlebars and disconnect the white plastic connector from the control module by depressing the tab. Carefully cut the zip tie securing the throttle cable.

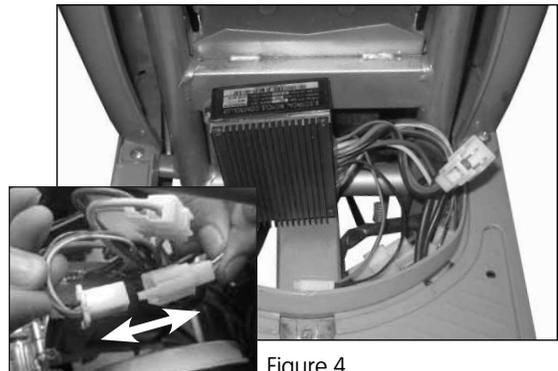


Figure 4

Step 5

Using a 2.5mm Allen wrench, loosen the throttle screw, but do not remove and slide throttle away from the grip.

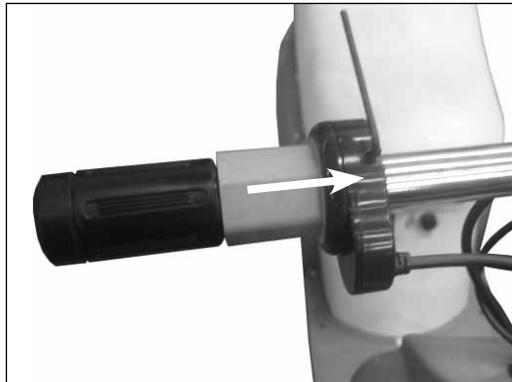


Figure 5

Step 6

Carefully wedge the flat head screwdriver under the edge of the handlebar grip, add a small amount of lubricant or water and remove the grip. **Note:** Save the grip for reassembly



Figure 6

Step 7

Reverse steps:

1. Secure new throttle in place, clean the grip of any water or lubricant and reinstall.
2. Reconnect the white plastic connector on the throttle to control module.
3. Reattach front seat fairing cover and secure with the three phillip screws previously removed.
4. Reattach seat compartment insert using the four screws previously removed and close the seat.

ATTENTION: Charge unit at least 18 hours before riding.